
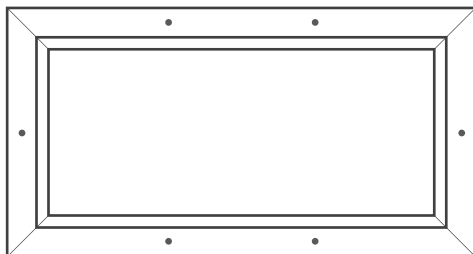


## UNFINISHED CURB



Install Structural Frame above Enhancement Panel. Press down firmly for proper sealing of unit. Use all fasteners provided.

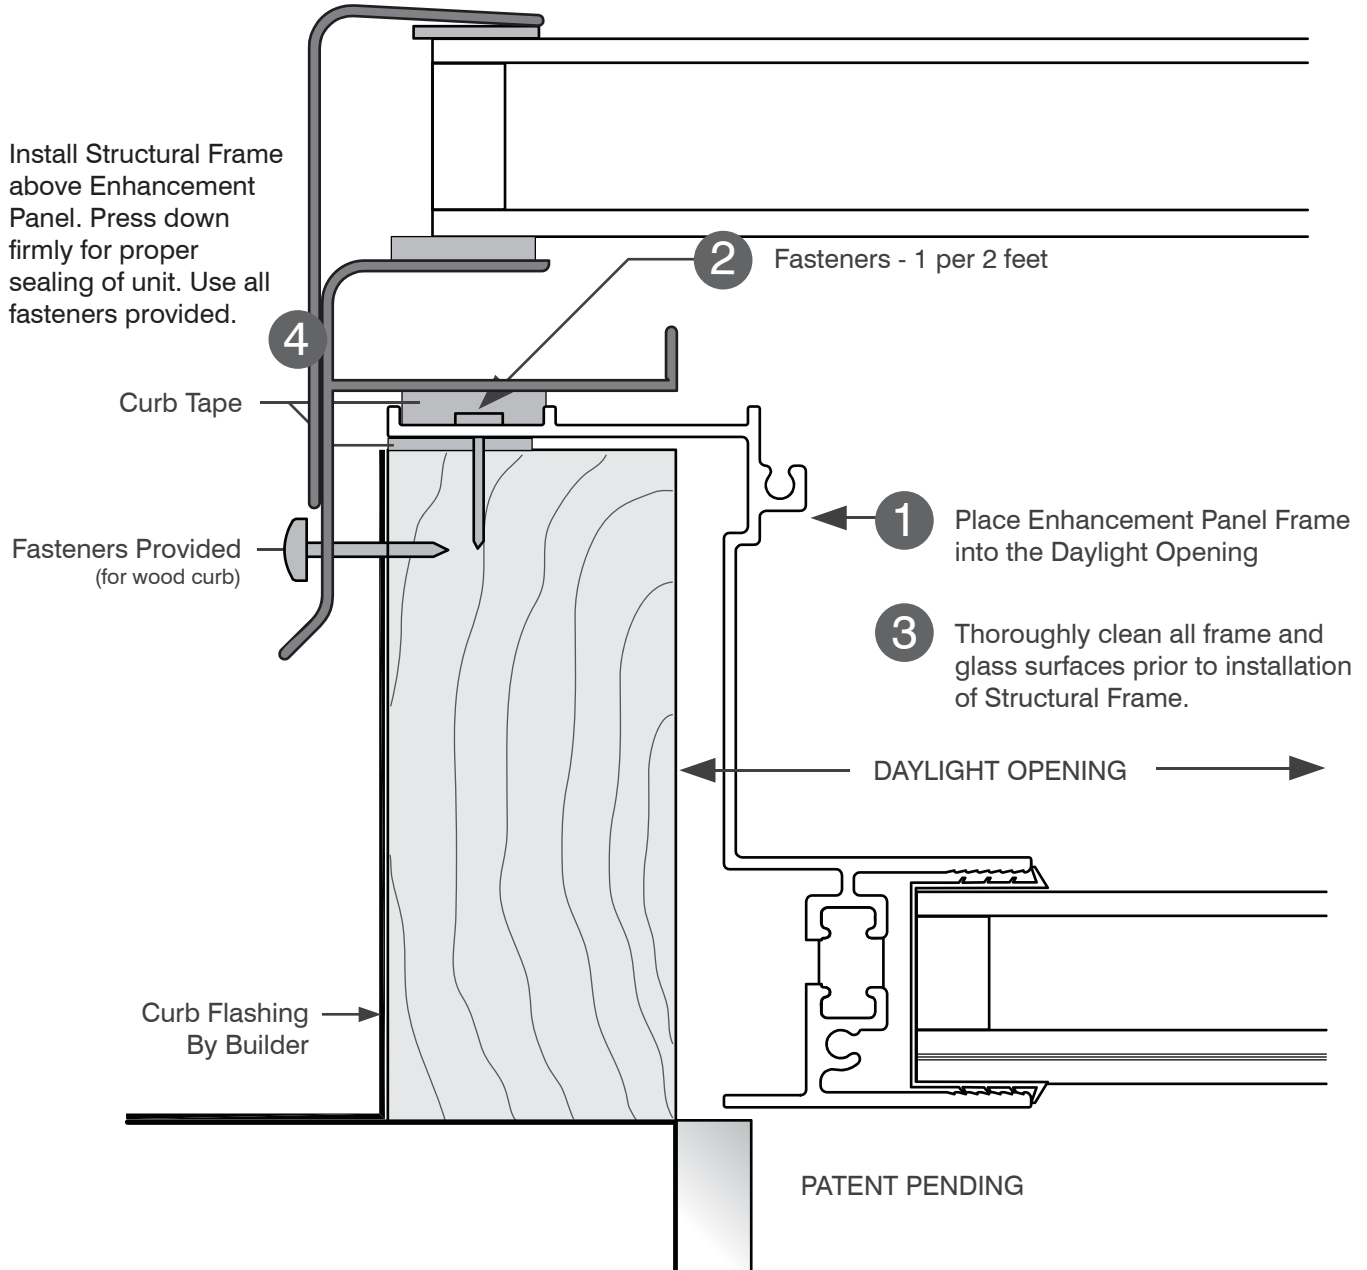

**NOTE:**  
Approximate fastener locations for typical 2650 Enhancement Panel Frame.

**FINISHED CURB**

Install Structural Frame above Enhancement Panel. Press down firmly for proper sealing of unit. Use all fasteners provided.

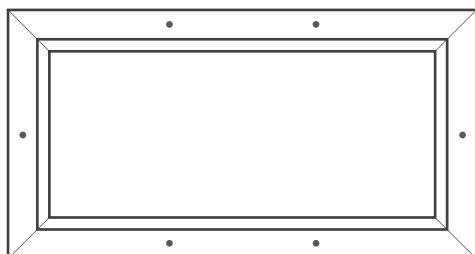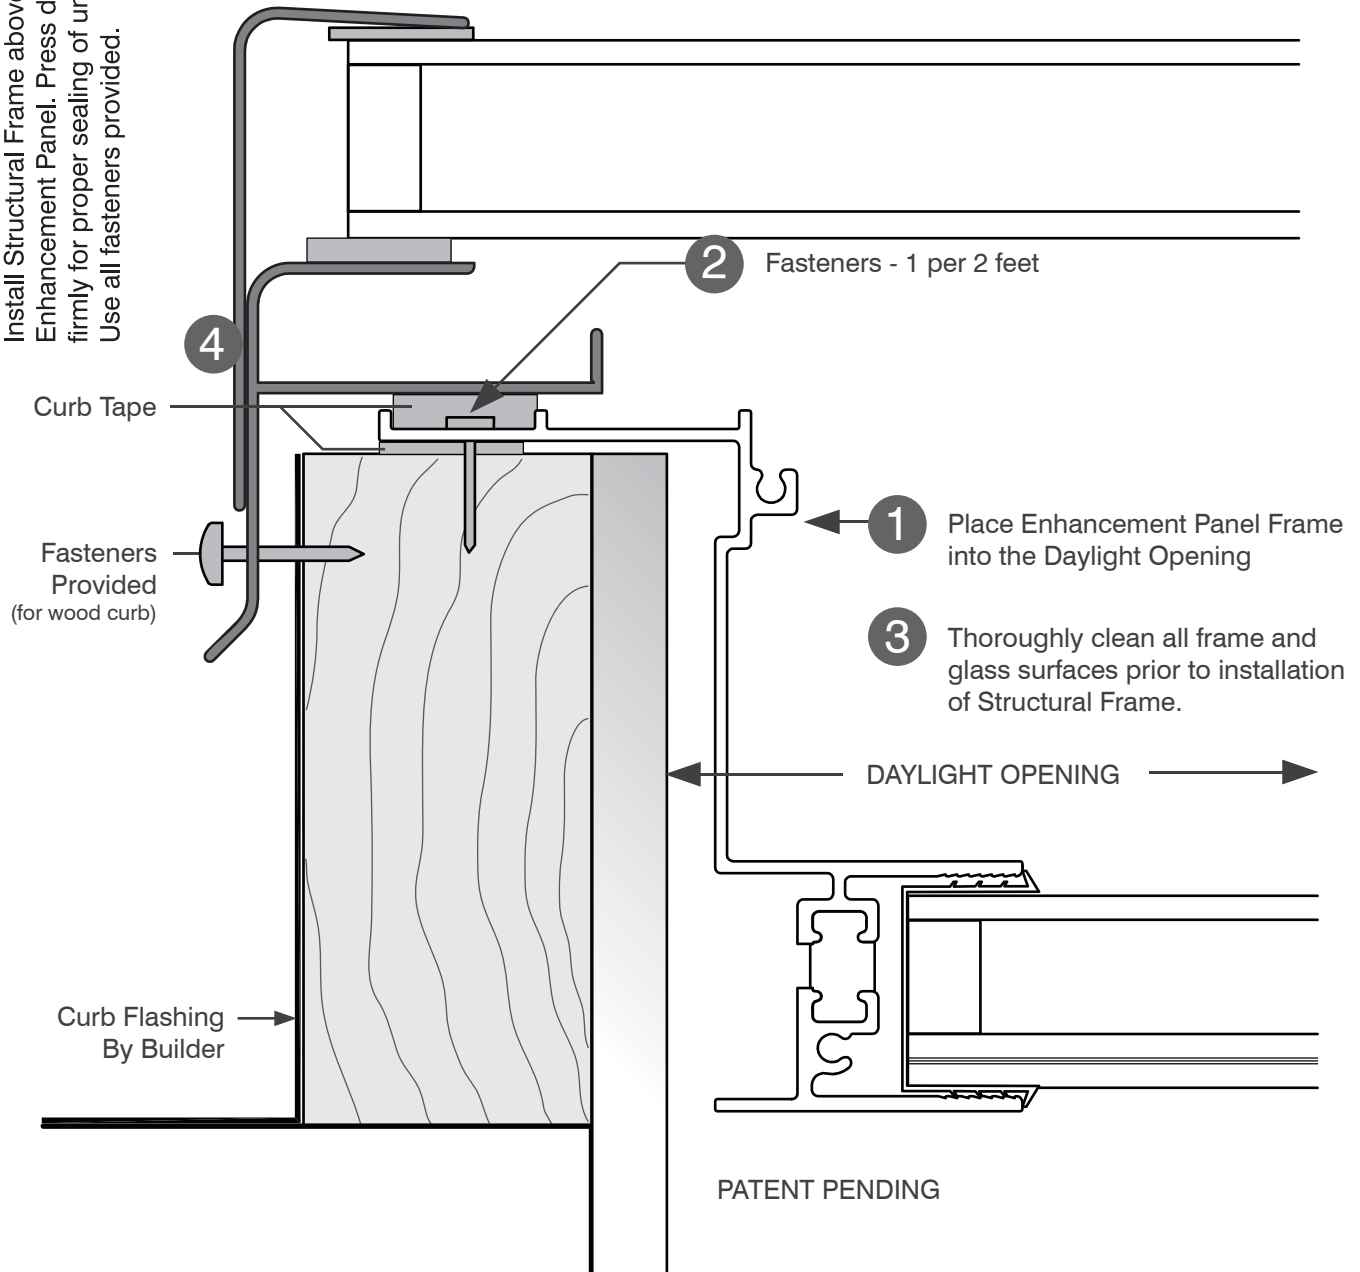

**NOTE:**  
Approximate fastener locations for typical 2650 Enhancement Panel Frame.



**CURB THICKNESS 2 INCHES OR MORE**

Install Structural Frame above Enhancement Panel. Press down firmly for proper sealing of unit. Use all fasteners provided.

Apply Double Layer of Curb Tape Provided

Fasteners Provided (for wood curb)

Curb Flashing By Builder

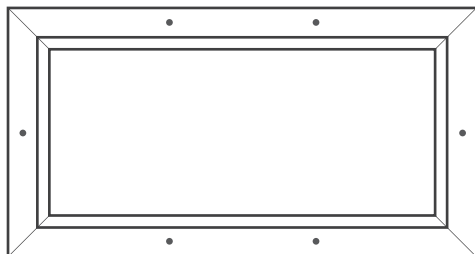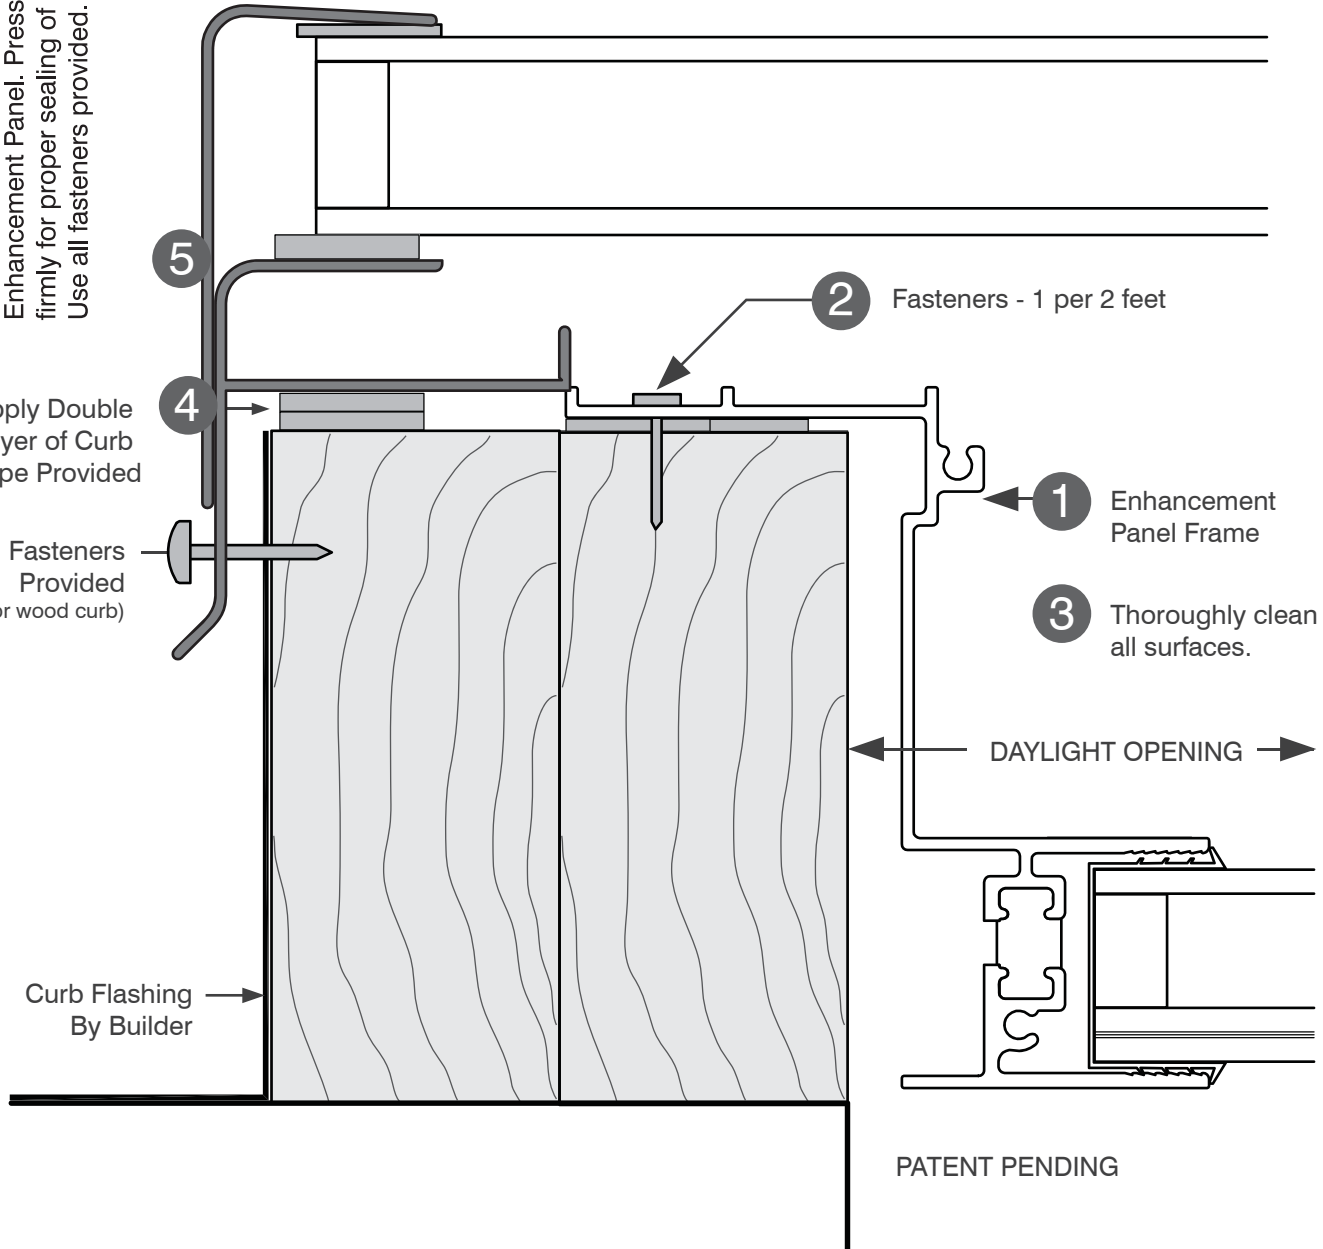

**NOTE:**  
Approximate fastener locations for typical 2650 Enhancement Panel Frame.